

Memory Lab

Audio Cassette Instructions




Step 1:

The Tascam Audio Recorder will record audio cassettes onto a USB thumb drive. Start by inserting a USB thumb drive into the USB port near the power button on the bottom left side. Then press the power button.



Step 2:

Select "Tape" by pressing the source button which is located right of the Rec Level knob.

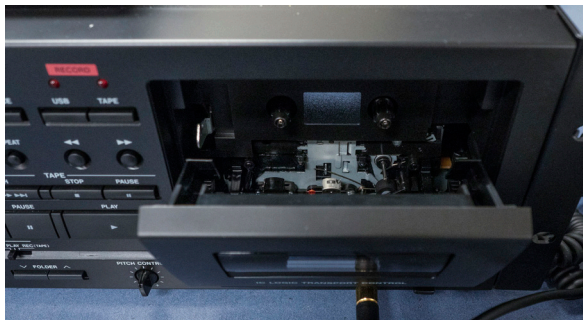

Step 3:

Open the audio cassette door by pressing the eject button. Load an audio cassette into the recorder with the tape facing downward.

After inserting the tape, close the door and press the play button nearest the tape deck or rewind to ensure starting at the beginning of the tape.



Step 4:

Press the USB Record button which is just right of the Source button. It will take about 10 seconds to prepare to record. During this time, adjust the Rec Level knob to ensure the volume is adequate.



Step 5:

Press the USB Record button a second time to begin recording. The recorder will indicate it is recording from the Tape with a time counter.



Step 6:

The recorder can split the resulting MP3 files for each track of audio. To do so, press the USB Record button during recording. It will take about ten seconds before splitting the file. During the setup time, the recorder will pause playing back the tape.

Step 7:

When finished recording, press the stop button to the right of the USB thumb drive. The tape will automatically stop playing. **Turn off the recorder before removing the drive.**